

Для включения ip tv на роутерах ASUS с олеговской прошивкой необходимо включить multicast routing

ASUS Wireless Router

ASUS

- Home
- Quick Setup
- Wireless
- IP Config
 - WAN & LAN
 - DHCP Server
 - Route
 - Miscellaneous
- NAT Setting
- Internet Firewall
- System Setup
- Status & Log
- Logout

IP Config - Route

This function allows you to add routing rules into ASUS Wireless Router. It is useful if you connect several routers behind ASUS Wireless Router to share the same connection to Internet.

Use DHCP routes?	<input checked="" type="radio"/> Yes <input type="radio"/> No
Enable multicast routing?	<input checked="" type="radio"/> Yes <input type="radio"/> No
Enable static routes?	<input type="radio"/> Yes <input checked="" type="radio"/> No

Static Route List

Network/Host IP	Netmask	Gateway	Metric	Interface
				LAN