

1. Первым делом правильно подключите роутер к сети - в WAN порт подключите кабель провайдера, в LAN порт(ы) подключайте ваш(и) компьютер(ы)
2. Далее на компьютере в настройках подключения по локальной сети (для протокола TCP/IP версии 4) выставите "получить адрес автоматически" (по умолчанию, если система "чистая" - можно не трогать)
3. Далее откройте через обозреватель (Internet Explorer, Opera, FireFox, и т.д.) страницу настроек роутера, обычно это адрес <http://192.168.0.1/> (можно посмотреть в инструкции к роутеру), и введите пароли (можно посмотреть в инструкции)
4. В интерфейсе настроек, в секции "SETUP / INTERNET -> MANUAL INTERNET CONNECTION OPTIONS" нажмите "manual configure"

Product Page: DIR-330 Hardware Version: A1 Firmware Version: 1.00

D-Link

DIR-330	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	INTERNET CONNECTION : There are 2 ways to setup your Internet connection. You can use the Web-based Internet Connection Setup Wizard or you can manually configure the connection.				Helpful Hints.. If you are new to networking and have never configured a router before, click on Setup Wizard and the router will run you through a few simple steps to get your network up and running. If you consider yourself an Advanced user and have configured a router before, click Manual Configure to input all the settings manually.
WIRELESS SETTINGS	INTERNET CONNECTION WIZARD : If you would like to utilize our easy to use Web-based Wizards to assist you in connecting your new D-Link Router to the Internet, as well as configure the Wireless settings, click on the Setup Wizard button below. <input type="button" value="Setup Wizard"/>				
NETWORK SETTINGS	MANUAL INTERNET CONNECTION OPTIONS : If you would like to configure the Internet and Wireless settings of your new D-Link Router manually, then click on the Manual Configure button below. <input type="button" value="Manual Configure"/>				
VPN SETTINGS					

5. На открывшейся странице выберите в строке "My Internet Connection is : " - "L2TP Username / Password"

Product Page: DIR-330 Hardware Version: A1 Firmware Version: 1.00

D-Link

DIR-330 // SETUP ADVANCED TOOLS STATUS SUPPORT

INTERNET CONNECTION

Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP, L2TP, and BigPond. If you are unsure of your connection method, please contact your Internet Service Provider.

Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

Save Settings Don't Save Settings

INTERNET CONNECTION TYPE :

Choose the mode to be used by the router to connect to the Internet.

My Internet Connection is : **Dynamic IP (DHCP)**

DYNAMIC IP (DHCP) INTERNET CONNECTION :

Use this Internet connection type with IP Address information and a Dynamic IP (DHCP) Internet Service Provider (ISP) didn't provide you with IP Address information.

Host Name :

MAC Address : - - - - - (optional)

Clone MAC Address

Primary DNS Address :

Secondary DNS Address : (optional)

MTU : 1500

Helpful Hints..

When configuring the router to access the Internet, be sure to choose the correct **Internet Connection Type** from the drop down menu. If you are unsure of which option to choose, please contact your **Internet Service Provider (ISP)**.

If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your **Internet Service Provider (ISP)** if needed.

6. Далее выбираем опцию "Static IP" и заполняем поля "IP Address", "Subnet Mask", "Gateway", "DNS", "Server IP/Name", "L2TP Account", "L2TP Password" и "L2TP Retype Password" данными из вашего договора

IP Address = IP адрес

Subnet Mask = маска подсети

Gateway = Основной/Стандартный шлюз

DNS = DNS сервер (10.221.0.50 или 10.221.10.100)

Server IP/Name = Адрес VPN сервера (l2tp.azimut-r.ru)

L2TP Account = Имя пользователя / Login

L2TP Password и L2TP Retype Password = пароль для доступа в сеть

Далее указываем значение MTU, для нашего типа подключения стандартным является 1460 байт.

Далее выбираем опцию "Always-on", что значит "всегда подключен" или же "Connect on demand", что значит "подключаться по необходимости"

И завершаем все нажатием кнопки "save settings" (выше на странице настроек) для сохранения изменений



DIR-330 //	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
INTERNET	<h3>INTERNET CONNECTION</h3> <p>Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP, L2TP, and BigPond. If you are unsure of your connection method, please contact your Internet Service Provider.</p> <p>Note: If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.</p> <p> <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/> </p>				Helpful Hints.. When configuring the router to access the Internet, be sure to choose the correct Internet Connection Type from the drop down menu. If you are unsure of which option to choose, please contact your Internet Service Provider (ISP) . If you are having trouble accessing the Internet through the router, double check any settings you have entered on this page and verify them with your ISP if needed.
WIRELESS SETTINGS	<h3>INTERNET CONNECTION TYPE :</h3> <p>Choose the mode to be used by the router to connect to the Internet.</p> <p>My Internet Connection is : <input type="text" value="L2TP (Username / Password)"/> <input type="button" value="v"/></p>				
NETWORK SETTINGS	<h3>L2TP :</h3> <p>Enter the information provided by your Internet Service Provider (ISP).</p> <p> <input type="radio"/> Dynamic IP <input checked="" type="radio"/> <u>Static IP</u> </p> <p> <u>IP Address :</u> <input type="text" value="10.221.3.125"/> <u>Subnet Mask :</u> <input type="text" value="255.255.255.0"/> <u>Gateway :</u> <input type="text" value="10.221.3.254"/> <u>DNS :</u> <input type="text" value="10.221.0.50"/> <u>Server IP/Name :</u> <input type="text" value="l2tp.azimut-r.ru"/> <u>L2TP Account :</u> <input type="text" value="Ваш логин"/> <u>L2TP Password :</u> <input type="password" value="*****"/> <u>L2TP Retype password :</u> <input type="password" value="*****"/> <u>Maximum Idle Time :</u> <input type="text"/> Minutes <u>MTU :</u> <input type="text" value="1460"/> <u>Connect mode select :</u> <input checked="" type="radio"/> <u>Always-on</u> <input type="radio"/> Manual <input type="radio"/> Connect-on demand </p>				
VPN SETTINGS					